
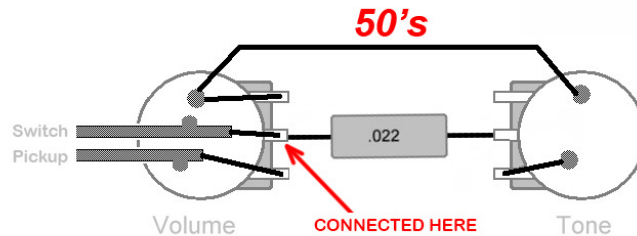


## Difference between the *Modern* and *50's* tone control wiring

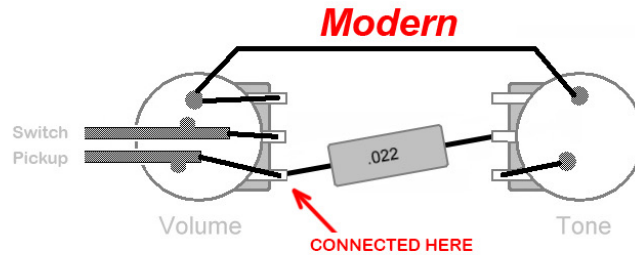

“*Modern*” style tone control wiring can tend to cut treble when turning down the VOL control, specially in the region between 8-10 on the VOL knob with a LOG pot.

“*50's*” style wiring has much less treble loss as the volume is turned down from full-on which is appealing to players who favor their controls at settings other than 10. Players can coax much more more character from the pickups changing the VOL control without changing the tone.