



**Re-wiring the Stratocaster ground buss into star-point ground  
after shielding the control cavity and back of pickguard  
(scratch plate) with copper foil**

*Typical modern Stratocaster wiring harness*

1

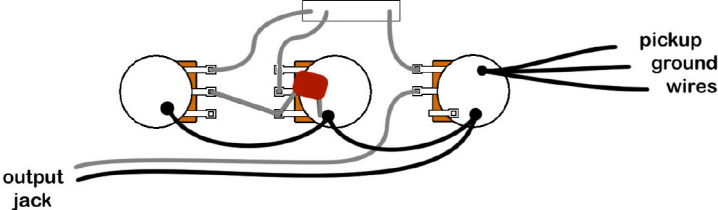

2

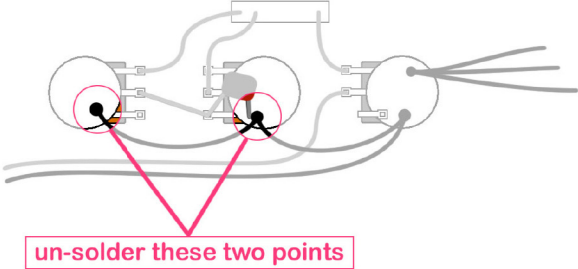

3

